




USER MANUAL

Product Features

- Multiple credential options
- Auto relock function
- Deadbolt cylinder
- Voice guide
- Modern touchpad
- Fake PIN code
- High security mode
- Intelligent user management

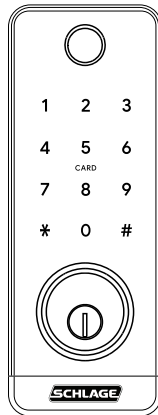

Schlage **S-610DB**
Digital Door Lock



 
Visit schlage-locks.asia or scan the QR code for more information.

PRECAUTIONS

- Please carefully read this manual prior to installing and using your product. It is crucial to adhere to the instructions outlined in this installation manual during the installation process.
- Please note that the warranty does not cover damages to the product caused by users who fail to follow the instructions provided in this installation manual.


Do not disassemble the unit by yourself

- This product is a precision electronic device. Do not attempt to disassemble the unit by yourself as it can cause electric shock or may damage the product. If you need field repairation, please contact our qualified service personnel.



Working environment


- **Storage**
Temperature: -20°C ~60°C
Relative humidity: 85%RH (No condensation)
Do not expose the product to direct sun. The storage period is within 1 year
- **Operating conditions**
Temperature: -10°C ~55°C
Relative humidity: 85%RH (No condensation)

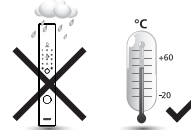

Prior to installing the digital lock, please ensure that you are in a suitable environment. It is important to avoid exposing the lock to direct sunlight or placing it in high humidity environments to prevent damage to the lock surface and body.

Cleaning of product

 
- To clean the lock, please use only a dry cloth. Avoid using water or any liquid, as it may damage the electronic circuitry of the lock. Additionally, it is important to keep the lock away from corrosive substances to prevent damage or rusting of the product surface.



Battery life of product

- **Battery lifecycle**
4 X 1.5V AA size LR6 batteries can last for at least 1 year (assuming 10 openings per day).
- **Low battery warning**
When receive low battery notification, please replace the batteries as soon as possible even though the lock could work for another 50 times.

PRODUCT COMPOSITION & COMPONENTS

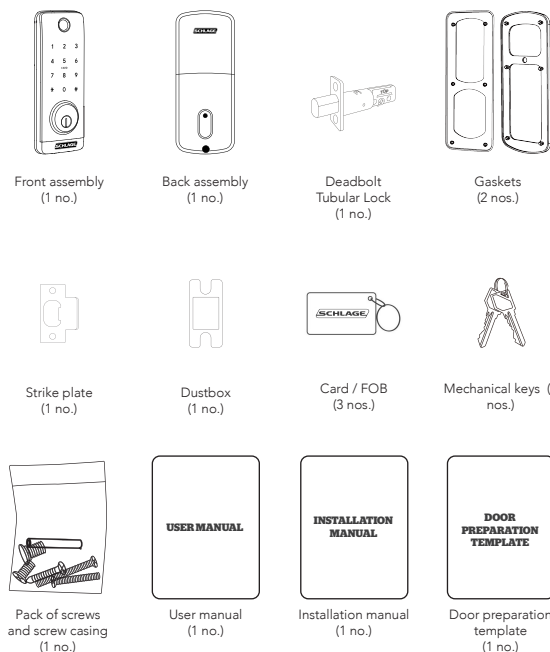

WARRANTY

Warranty Card (Authorized Distributor's Copy)

| Product Information | | | |
|------------------------|---|--------------------|--|
| S/N | | Product code | |
| Purchased Date | | Purchased location | |
| Authorized Distributor | | Installation Date | |
| Installed by | <input type="checkbox"/> By distributor <input type="checkbox"/> Installation by yourself (warranty will be void due to improper installation) | | |

| Customer Information | |
|----------------------|-------------|
| Name | Contact No. |
| Address | |



Warranty Card (Customer's Copy)

| Product Information | | | |
|------------------------|---|--------------------|--|
| S/N | | Product code | |
| Purchased Date | | Purchased location | |
| Authorized Distributor | | Installation Date | |
| Installed by | <input type="checkbox"/> By distributor <input type="checkbox"/> Installation by yourself (warranty will be void due to improper installation) | | |

| Customer Information | |
|----------------------|-------------|
| Name | Contact No. |
| Address | |

Out of power warning

- Unlock your digital lock with mechanical back-up key. Replace the batteries immediately after the door is opened.

In the event of an emergency, you can open the door using a power bank. After opening the door, please wait for 2 seconds before disconnecting the power supply, allowing the lock body to reset. To ensure normal operation, it is advisable to replace the battery on the inner panel ahead of time.

Remove user access / Card loss

- Delete fingerprint with respect to the assigned fingerprint serial number.
- If you have forgotten the serial number associated with a user's fingerprint, it is recommended to delete all stored fingerprints and re-register the fingerprint access for active users.
- If a card is lost, it is important to delete the user card access based on the associated card serial number of the lost card.
- If you are unsure of the serial number, it is recommended to delete access for all user cards and re-register them for active key card holders.

Stop triggered alarm

If tampering is detected, the built-in alarm will be triggered, resulting in a continuous ringing sound. To deactivate the alarm, simply enter a valid user code into the lock. This will halt the alarm from ringing.

| | Name | Product Specification |
|----|---------------------------|--|
| 1 | Front Assembly | 63mm(W) / 170mm(H) / 17.5mm(D) |
| 2 | Back Assembly | 72.2mm(W) / 164mm(H) / 30mm(D) |
| 3 | Back Bracket | 1 piece |
| 4 | Deadbolt Tubular Lock | 25mm (Ø) / 83mm(W) |
| 5 | Gaskets | 2 pieces |
| 6 | Strike Plate | 29mm(W) / 44mm(EW) / 70mm(H) |
| 7 | Card / FOB | 3 pieces |
| 8 | Emergency Key | 2 pieces |
| 9 | Battery | 4 X 1.5V AA size LR6 batteries |
| 10 | Screws | 1 set |
| 11 | User Manual | Main user manual |
| 12 | Door Preparation Template | Use guide to make hole on the door |
| 13 | Installation Manual | Main installation manual |
| 14 | Installation Condition | Door thickness 35~65mm |
| 15 | High Temperature Warning | <p>Working temperature: -10°C~55°C Sensor working temperature (high): 60°C±5°C</p> <p>If high temperature is detected that may potentially sparks a fire, the alarm will be triggered with a beeping sound to notify user.</p> <p>If the interior body is exposed to direct sun for a long time and exceeds the set temperature, a beep sound will ring to notify the user. The high temperature detection feature also works with double locking function.</p> |

W: Width
EW: Extended Width
H: Height
D: Depth

FUNCTIONS

Battery Compartment
Install 4 'AA' alkaline batteries.

Thumbturn
Rotate the thumbturn clockwise to lock and anti-clockwise to unlock.

Fingerprint Sensor
Authorised users to tap their fingers at this area to unlock from outside.

Card Detection Area
Tap card at this area to unlock from outside.

Keypad
Enter password to unlock from outside.

Keyhole
In the event of emergency, insert mechanical key to unlock from outside.

Privacy Mode Button
To activate privacy mode, simply press the button once. To deactivate privacy mode, press the button again or enter the administrator PIN from the outside.

SETTINGS

Settings Description

| Program Code | 1 (6 digits) | You cannot unlock with program code |
|--------------|-------------------|---|
| PIN | 100 (6-10 digits) | Initial administrator code is '123456' Support fake PIN code |
| Finger-print | 100 | No user fingerprint is stored in the lock in initial setting |
| Card | 100 | No user card is stored in the lock in initial setting |

1.1.1 Adding a new administrator

| | | | | | | | | | | | |
|-------------|-----------|---|---|----|---|---|---|----|---|---|-----------|
| Fingerprint | Hand icon | 1 | # | AC | # | 1 | 1 | UN | # | 1 | x 4 |
| Card | Hand icon | 1 | # | AC | # | 1 | 1 | UN | # | 2 | Hand icon |
| PIN | Hand icon | 1 | # | AC | # | 1 | 1 | UN | # | 3 | RC # RC # |

1.1.2 Adding a new user

| | | | | | | | | | | | |
|-------------|-----------|---|---|----|---|---|---|----|---|---|-----------|
| Fingerprint | Hand icon | 1 | # | AC | # | 1 | 2 | UC | # | 1 | x 4 |
| Card | Hand icon | 1 | # | AC | # | 1 | 2 | UC | # | 2 | Hand icon |
| PIN | Hand icon | 1 | # | AC | # | 1 | 2 | UC | # | 3 | RC # RC # |

1.1.3 Delete user code

| | | | | | | | | |
|-----------|---|---|----|---|---|---|----|---|
| Hand icon | 1 | # | AC | # | 1 | 3 | UC | # |
|-----------|---|---|----|---|---|---|----|---|

1.1.4 Delete user type

| | | | | | | | | | |
|-------------|-----------|---|---|----|---|---|---|---|---|
| Fingerprint | Hand icon | 1 | # | AC | # | 1 | 4 | 1 | # |
| Card | Hand icon | 1 | # | AC | # | 1 | 4 | 2 | # |
| PIN | Hand icon | 1 | # | AC | # | 1 | 4 | 3 | # |

1.2 System setting

| | | | | | | | |
|-----------|---|---|----|---|---|---|--------------------|
| Hand icon | 1 | # | AC | # | 2 | 1 | Time and date |
| | | | | | | 2 | Language |
| | | | | | | 3 | Volume |
| | | | | | | 4 | 2 factor unlocking |
| | | | | | | 5 | Anti-pry function |

1.2.1 Set date and time

| | | | | | | | | |
|-----------|---|---|----|---|---|---|----------------|---|
| Hand icon | 1 | # | AC | # | 2 | 1 | YY MM DD HH MM | # |
|-----------|---|---|----|---|---|---|----------------|---|

1.5 Activate passage lock

| | | | | | |
|-----------|----|---|-----------|---|--------------------|
| Hand icon | RC | # | Lock icon | 0 | Hold for 3 seconds |
|-----------|----|---|-----------|---|--------------------|

The passage lock mode can be easily deactivated by administrators or users using their registration code, fingerprints, or access cards.

1.6 Configure auto lock (5s, 10s, 15s, 20s)

| | | | | | | |
|------------|-----------|----|---|-----------|---|--------------------|
| 5 seconds | | | | | 1 | Hold for 3 seconds |
| 10 seconds | Hand icon | RC | # | Lock icon | 2 | |
| 15 seconds | | | | | 3 | |
| 20 seconds | | | | | 4 | |

2 Wireless module setting

| | | | | | |
|-----------|---|---|----|---|---|
| Hand icon | 8 | # | RC | # | Follow instruction on mobile app to continue with the setup |
|-----------|---|---|----|---|---|

Mobile Access

The lock is now available to be paired with a mobile device using the Schlage Base app. Use the Schlage Base app to set up your lock, scan the QR code below to download the app.



App Store download for IOS user



Google Play Store download for Android user

Base For detailed instructions on using the Schlage Base application, please refer to the application user manual (all user manuals can be found at schlage-locks.asia).



Schlage Base App User Manual (WiFi Connectivity)

Factory Setting

| Item | Setting Status | Ref. Page |
|----------------------------|----------------|-----------|
| Language (English/Chinese) | English | |
| Volume | 3 levels | |
| Time & date | YY MM DD HH MM | |

*Initial administrator code: press 123456 followed by # to unlock

How to replace battery

If the voltage is lower than 4.8V, the lock will trigger an alarm every time the lock is unlocked. Remove the battery cover and replace the 4 "AA" alkaline batteries.

Shortcut icons with descriptions

| | | | | | |
|-----------|--------------------------------|------------------|-------------|------------------|-------------|
| Hand icon | Touch to activate keypad | Fingerprint icon | Fingerprint | Random code icon | Random code |
| AC | Administrator code (123456) | * [*] button | | Card / FOB icon | Card / FOB |
| UN | User number (1-5) | # [#] button | | | |
| UC | User code (6-100) | Lock icon | Unlock | | |
| RC | Registration code (6-9 digits) | Lock icon | Lock | | |

1. System menu

| | | | | | | |
|-----------|---|---|----|---|---|-------------------------|
| Hand icon | 1 | # | AC | # | 1 | User management |
| | | | | | 2 | System settings |
| | | | | | 3 | Restore factory setting |

1.1 User management

| | | | | | | | |
|-----------|---|---|----|---|---|---|---------------------|
| Hand icon | 1 | # | AC | # | 1 | 1 | Add administrator |
| | | | | | | 2 | Add users |
| | | | | | | 3 | Delete by User Code |
| | | | | | | 4 | Delete by User Type |

1.2.2 Change language

| | | | | | | | | |
|---------|-----------|---|---|----|---|---|---|---|
| English | Hand icon | 1 | # | AC | # | 2 | 2 | 1 |
| Chinese | | | | | | | | 2 |

1.2.3 Change volume

| | | | | | | | | | |
|-------------|-----------|---|---|----|---|---|---|---|---|
| Volume up | Hand icon | 1 | # | AC | # | 2 | 3 | 1 | # |
| Volume down | | | | | | | | 2 | |

1.2.4 Set 2 factor unlock

| | | | | | | | | |
|-----------------|-----------|---|---|----|---|---|---|---|
| Normal setting | Hand icon | 1 | # | AC | # | 2 | 4 | 1 |
| 2 factor unlock | | | | | | | | 2 |

1.2.5 Set anti-pry function

| | | | | | | | | |
|---------|-----------|---|---|----|---|---|---|---|
| Enable | Hand icon | 1 | # | AC | # | 2 | 5 | 1 |
| Disable | | | | | | | | 2 |

1.3.1 Restore factory setting

| | | | | | | |
|-----------|---|---|----|---|---|---|
| Hand icon | 1 | # | AC | # | 3 | # |
|-----------|---|---|----|---|---|---|

1.3.2 Activate random security coding function

| | | | | |
|-----------|------------------|----|---|-----------|
| Hand icon | Random code icon | RC | # | Lock icon |
|-----------|------------------|----|---|-----------|

1.4 Unlock digital lock from outside

| | | |
|-------------|------------------|---|
| Fingerprint | Fingerprint icon | Place your finger on the fingerprint sensor |
| Card | Card icon | Place card on the card reader area |
| PIN | Hand icon | RC # Lock icon |

About Allegion™

Allegion (NYSE: ALLE) is a global pioneer in seamless access, with leading brands like CISA®, Interflex®, LCN®, Schlage®, SimonsVoss® and Von Duprin®. Focusing on security around the door and adjacent areas, Allegion secures people and assets with a range of solutions for homes, businesses, schools and institutions.

For more, visit www.allegion.com



Contact Number

| | |
|-----------------------------------|---------------------------|
| ALLEGION (SOUTHEAST ASIA) PTE LTD | (65) 6227 7318 |
| ALLEGION INDIA PRIVATE LIMITED | (91) 080 61229530 |
| ALLEGION HONG KONG LIMITED | (852) 2235-0600/2565-1409 |
| ALLEGION THAILAND LIMITED | (66) 20514141 |

Email sea.info@allegion.com
www.allegion.com.sg

